


Installation Instructions Modular Panels


● These installation instructions apply to all modular panels. Following them will ensure the best possible result.

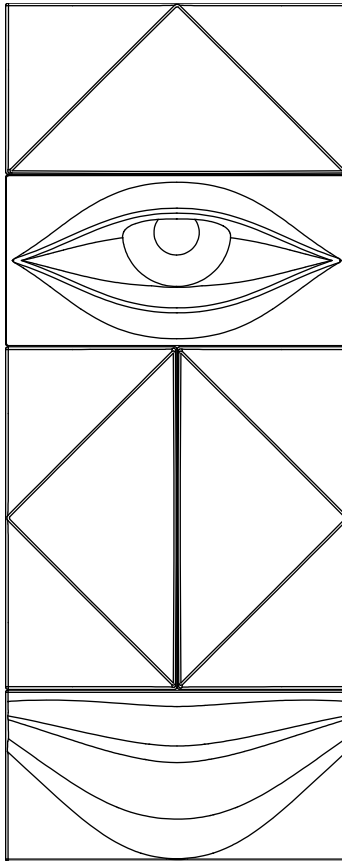


1

1. Bracket (No. 3009214)
Includes adhesive backing.
2. Wall plugs and mounting screws
3. Screwdriver or drill driver
4. Spirit level
5. Pencil


Materials & Tools

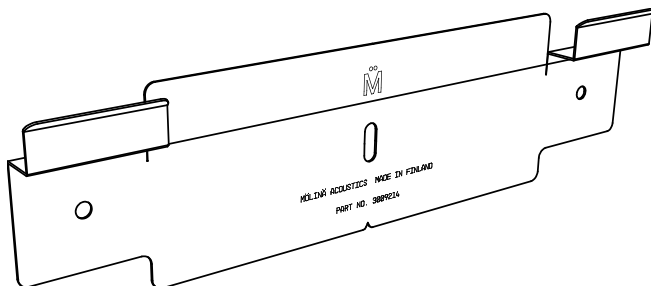


1

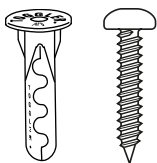

2

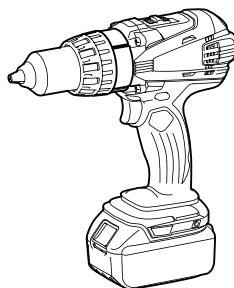

3

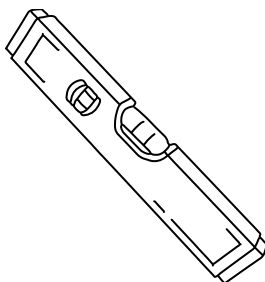


4



5

2

General

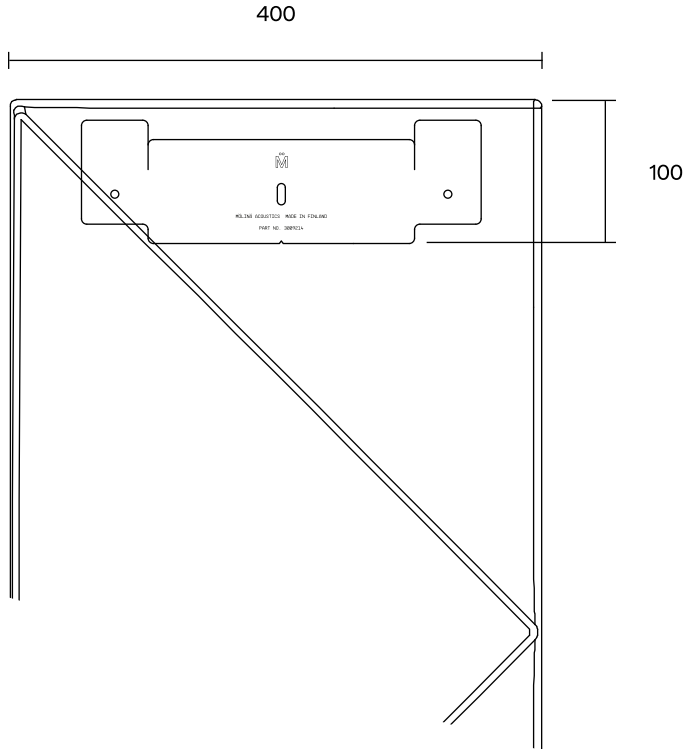

The bracket is compatible with all Mölinä modular acoustic panels for both vertical and horizontal installation.

The distance from the lower edge of the bracket to the top edge of the panel is 100 mm.

The brackets include an adhesive surface that allows for screwless installation. If desired, you can secure the attachment with screws.

Ensure that the wall structure is suitable for mounting the panels, and always use fixings appropriate for the installation surface.

3

Installation

1. Position the brackets according to the planned panel layout. Horizontal positioning does not require extreme precision, but it is recommended to space the brackets from center to center in line with the panels.
2. Draw the layout lines on the mounting surface using a spirit level.
3. Attach the brackets using the adhesive surface, and if desired, secure them with screws.
4. Start hanging the panels from the bottom upwards; otherwise the previous panel will obstruct installation. Hang the panel onto the bracket and ensure proper fit by gently pulling the lower edge of the panel slightly towards you.

